


#### T2 terminator

# **Application Tooling Specification Sheet**

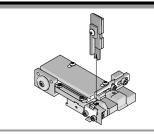

Order No. 63910-3700


#### **FEATURES**

- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tab length
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements

#### **SCOPE**

Products: 1.25mm (.049") Pitch Crimp Terminal, 26-32 AWG.

Terminal Series No.	Terminal Order No.		Wire Size		Insulation Diameter		Strip Length	
Terminal Series No.			AWG	mm²	mm	ln.	mm	ln.
50058	50058-8000	50058-8200	28-32	0.08-0.03	0.50-1.00	.020039	1.40-1.90	.055075
	50058-8300							
50079	50079-8000	39-00-0413	26-28	0.12-0.08	0.50-1.00	.020039	1.40-1.90	.055075
	50079-8053	39-00-0414						
	50079-8099							

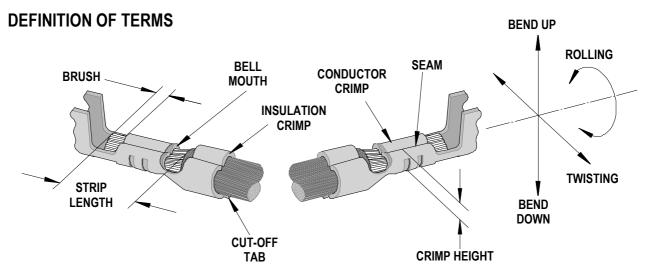

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

Doc No: ATS-639103700 Release Date: 11-01-07 **UNCONTROLLED COPY** Page 1 of 6 Revision: D Revision Date: 10-18-11

## **INSULATION CRIMP FORM**

This crimp terminal is designed for miniaturization; therefore each dimension of insulation crimp portion appears small as compared to the terminal material thickness. In order to avoid insulation piercing the crimp forms by the insulation barrel, coining is provided inside of the insulation barrel. For this reason, various crimp forms will occur at the tip of the insulation crimp barrel shown in the figure below.

These crimp forms maybe changed completely by a small change in the wire, insulation punch, or terminal.

These crimp forms are satisfactory for original function of the insulation crimp portion and it is confirmed that all of these forms below are acceptable insulation crimps.







### **CRIMP SPECIFICATION**

Terminal Series No.	Bell mouth		Cut-off Tab	Maximum	Conductor Brush		
	mm	ln.	mm	ln.	mm	ln.	
50058	0.00	.000	0.15	.006	0.00-0.70	.000028	
50079	0.00	.000	0.15	.006	0.00-0.70	.000028	

	Bend up Bend down		Twist Roll		Punch Width mm (Ref)				0	
Terminal Series No.					Conductor		Insulation		Seam	
	Degree		Degree		mm	ln	mm	ln	Seam shall not be open and no wire allowed out of	
50058	5	4	6	8	0.80	.031	0.85	.033	the crimping area	
50079	5	4	6	8	0.80	.031	0.85	.033	the chimping area	

After crimping, the conductor profile should measure the following.

Terminal Series No.	Wire Size		Cond Crimp	Pull Force Minimum		
	AWG	mm <sup>2</sup>	mm	ln.	N	Lb.
	28	0.80	0.51-0.56	.020022	9.8	2.2
50058	30	0.05	0.48-0.53	.019021	4.9	1.1
	32	0.03	0.46-0.51	.018020	2.9	0.7
50079	26	0.12	0.60-0.65	.023025	9.8	2.2
50079	28	0.08	0.56-0.61	.022024	9.8	2.2

Pull Force should be measured with no influence from the insulation crimp. The above specifications are guidelines to an optimum crimp.


Doc No: ATS-639103700 Release Date: 11-01-07 **UNCONTROLLED COPY** Page 2 of 6 Revision: D Revision Date: 10-18-11

# **PARTS LIST**

T2 Terminator 63910-3700								
Item	Order No	0 0						
Perishable Tooling								
	63910-3770	63910-3770	Tool Kit (All "Y" Items)	REF				
1	63444-0802	63444-0802	Conductor Punch	1 Y				
2	63445-0821	63445-0821	Combination Anvil	1 Y				
3	63454-0069	63454-0069	Insulation Punch	1 Y				
4	63443-0003	63443-0003	Cut-Off Plunger	1 Y				
5	63443-0012	63443-0012	Front Plunger Retainer	1 Y				
		Other Con	nponents					
6	11-18-4083	60707-8	Feed Guide	1				
7	11-24-1067	4996-4	Cut-Off Plunger Spring	1				
8	11-40-4039	8302-5	Plunger Striker	1				
9	63443-0009	63443-0009	Front Scrap Chute	1				
10	63443-0024	63443-0024	Key	1				
11	63443-0085	63443-0085	Wire Stop L-Bracket	1				
12	63443-0090	63443-0090	Wire Stop	1				
13	63443-1703	63443-1703	Height Spacer	1				
14	63443-2217	63443-2217	Coarse Spacer (17.00mm)	1				
15	63443-2310	63443-2310	Fine Spacer (3.50mm)	1				
16	63443-6003	63443-6003	Rear Cover	1				
Frame								
17	17 63800-8500 63800-8500 T2 Terminator							
Hardware								
18	N/A	N/A	M3 by 6 Long SHCS	2**				
19	N/A	N/A	M3 by 6 Long FHCS	1**				
20	N/A	N/A	M4 by 6 Long SHCS	2**				
21	N/A	N/A	M4 by 12 Long BHCS	2**				
22	N/A	N/A	M4 by 14 Long SHCS	2**				
23	N/A	N/A	M4 by 45 Long SHCS	2**				
24	N/A	N/A	M5 by 12 Long SHCS	1**				
25	, , ,							
** Ava	** Available from an industrial supply company such as MSC (1-800-645-7270).							

**UNCONTROLLED COPY** Page 3 of 6 Doc No: ATS-639103700 Release Date: 11-01-07 Revision Date: 10-18-11

Revision: D

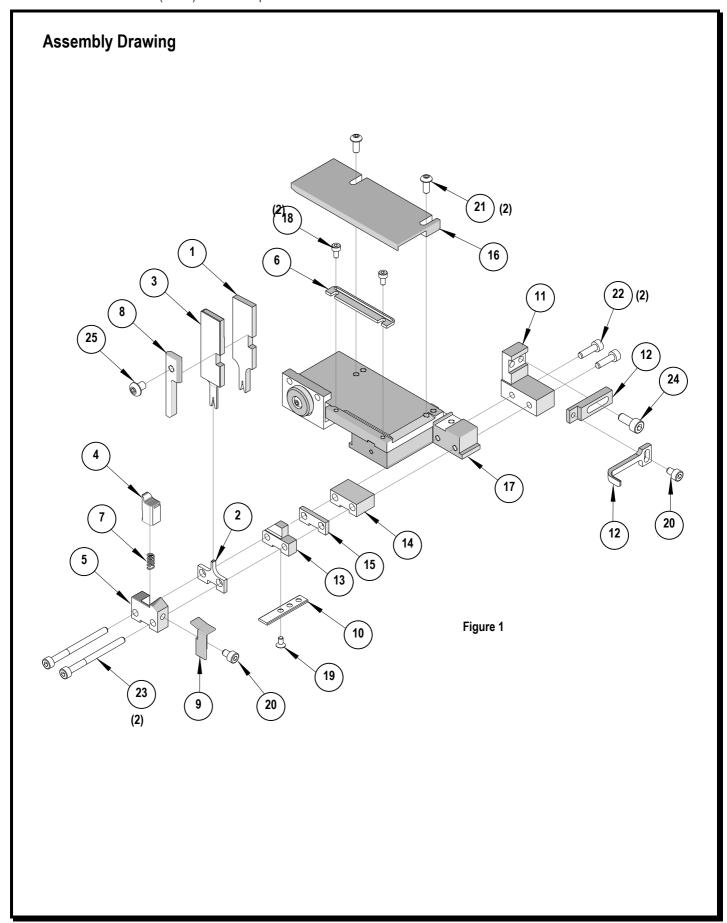

Doc No: ATS-639103700 Revision: D Release Date: 11-01-07 Revision Date: 10-18-11 **UNCONTROLLED COPY** 

#### **NOTES**

#### Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

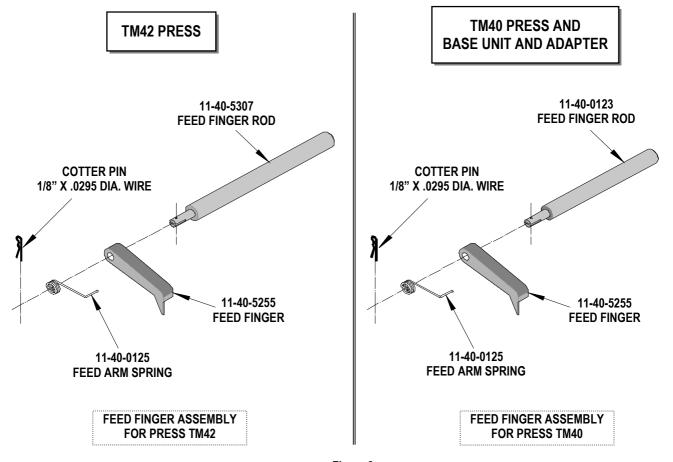


Figure 2

Doc No: ATS-639103700 Release Date: 11-01-07 **UNCONTROLLED COPY** Page 5 of 6 Revision: D Revision Date: 10-18-11

#### **NOTES**

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

**CAUTION**: To prevent injury never operate this Terminator without the guards supplied with the press or in place. Reference the TM42 press manufacturer's instruction manual.

**CAUTION**: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

http://www.molex.com

**UNCONTROLLED COPY** Doc No: ATS-639103700 Release Date: 11-01-07 Page 6 of 6 Revision Date: 10-18-11